

OPERATION

Diverter Valve


Turn the Diverter Handle to route water flow to the Wall Shower OR to the Hand Shower

Note:
Depending on the model of your unit, the handle may or may not point exactly in the direction the water is desired to go. This is not a defect, simply turn the handle until the water is routed to the desired showerhead.



TIP:

When switching the flow from the Wall Shower to the Hand Shower, all of the water will not drain from the Wall Shower instantly. Water will continue to drip from the Wall Shower for a minute or two.

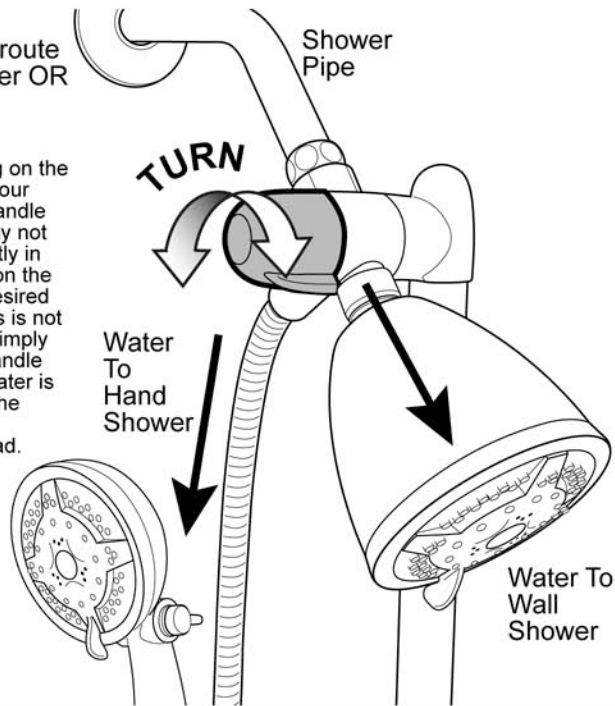


Flexible Spray Nozzles

To clean the spray nozzles of mineral deposits, simply flex the rubber nozzles.

The build up of mineral deposits on the spray nozzles will result in lower spray performance. Be sure to clean the nozzles at first sign of build-up.

The build up of mineral deposits on the Filter Washers will also result in poor spray performance. Please see Filter Washers in the Cleaning section - pg 6.

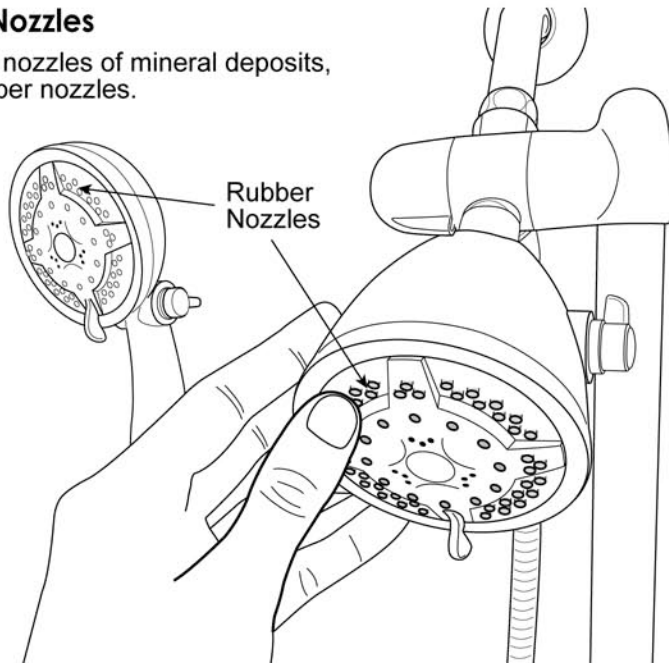

Questions? Assistance?

Do you have questions about the installation or functions of this product?

1-800-776-6364
M-F 8am to 5pm PST

ShowerTek, Inc.

www.showertek.com


Hand Shower Adjustable Mount

Pinch Release Button and move Hand Shower Adjustable Mount up or down.

CAUTION!

Care should be taken when moving the Hand Shower Adjustable Mount up or down.

Be sure that the Slide Bar is free of any soap, shampoo or cleaning agent as these substances could cause the Hand Shower Adjustable Mount to lose its grip on the bar and slide down.

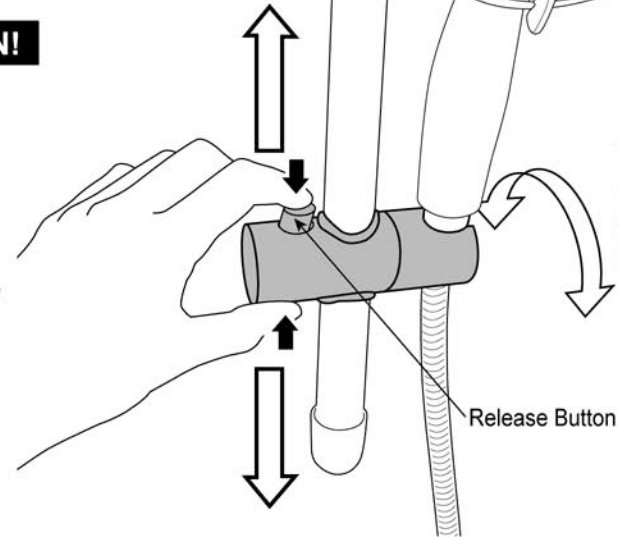


Adjustable Mount Pivot Release Button does NOT need to be pressed for pivoting.

5
PAGE

Spray Selections

Rotate spray face to select the desired spray pattern.

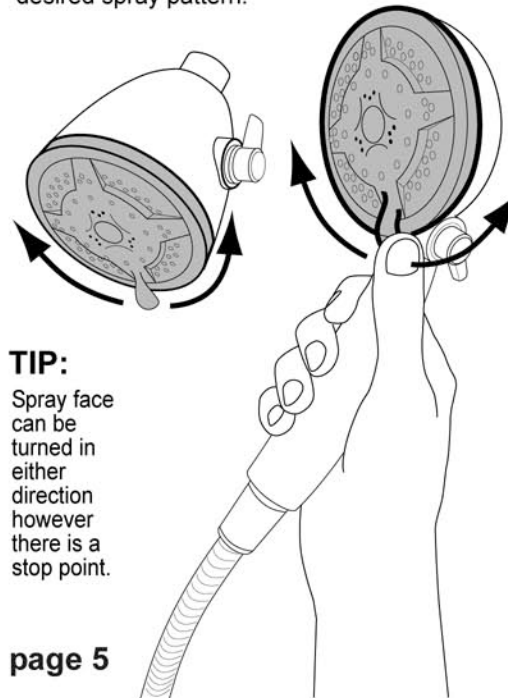


TIP:

Spray face can be turned in either direction however there is a stop point.

Slide Bar Pivot

Slide Bar is designed to pivot forward and backward.

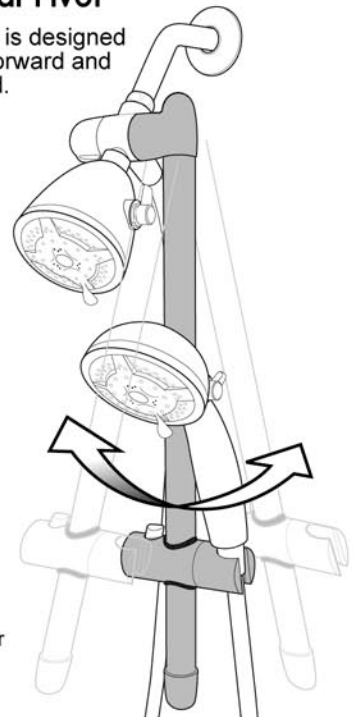

Note:
This is normal function - nothing is wrong with the Diverter Valve or Slide Bar.